

# MOTOMAN-SIA20D/SIA20F SUPPLEMENTAL INSTRUCTIONS

---

---

## TYPE

YR-SIA020D-A02 (ONE EXTERNAL AXIS SPEC. FOR DX100)

YR-SIA020D-A03 (ONE EXTERNAL AXIS DRIP-PROOF SPEC.  
FOR DX100)

YR-SIA020F-A02 (ONE EXTERNAL AXIS SPEC. FOR FS100)

YR-SIA020F-A03 (ONE EXTERNAL AXIS DRIP-PROOF SPEC.  
FOR FS100)

---

---

Upon receipt of the product and prior to initial operation, read these instructions thoroughly, and retain for future reference.

---

## MOTOMAN INSTRUCTIONS

### MOTOMAN-SIA20D / SIA20F INSTRUCTIONS

#### DX100 INSTRUCTIONS

DX100 OPERATOR'S MANUAL

DX100 MAINTENANCE MANUAL

#### FS100 INSTRUCTIONS

FS100 OPERATOR'S MANUAL

FS100 MAINTENANCE MANUAL

The DX100 operator's manual above corresponds to specific usage.  
Be sure to use the appropriate manual.

Part Number: 173675-1CD

Revision: 0

Copyright © 2015, Yaskawa America, Inc.

#### Terms of Use and Copyright Notice

All rights reserved. This manual is freely available as a service to Yaskawa customers to assist in the operation of Motoman robots, related equipment and software. This manual is copyrighted property of Yaskawa and may not be sold or redistributed in any way. You are welcome to copy this document to your computer or mobile device for easy access but you may not copy the PDF files to another website, blog, cloud storage site or any other means of storing or distributing online content.

Printed in the United States of America

First Printing, 2015

Yaskawa America, Inc.  
Motoman Robotics Division  
100 Automation Way  
Miamisburg, OH 45342  
Phone: 937-847-6200

[www.motoman.com](http://www.motoman.com)

---

## Introduction

Each of following supplementary instruction manuals are different from YR-SIA20D / SIA020F-A0\* with standard specifications (hereinafter referred to as YR-SIA20D / SIA20F-A0\*).

- YR-SIA020D-A02 ONE EXTERNAL AXIS SPEC. for DX100 (hereinafter referred to as SIA20D-A02)
- YR-SIA020D-A03 ONE EXTERNAL AXIS DRIP-PROOF SPEC. for DX100 (hereinafter referred to as SIA20D-A03)
- YR-SIA020F-A02 ONE EXTERNAL AXIS SPEC. for FS100 (hereinafter referred to as SIA20F-A02)
- YR-SIA020F-A03 ONE EXTERNAL AXIS DRIP-PROOF SPEC. for FS100 (hereinafter referred to as SIA20F-A03)

In case of using SIA20D-A02, A03 / SIA20F-A02, A03, read this supplementary instruction manual thoroughly together with the following instruction manual:

- "MOTOMAN-SIA20D / SIA20F INSTRUCTIONS" (156387-1CD).

## Point of Difference

SIA20D-A02, A03 / SIA20F-A02, A03 differ from SIA20D / SIA20F-A0\* in the following point:

- Cables built-in for one external axis

The difference from the above mentioned "MOTOMAN-SIA20D / SIA20F INSTRUCTIONS" are as follows:

1. SIA20D-A01 / SIA20F-A01 drip-proof specification for flange part (section 5.6)
2. Internal User I/O Wiring Harness and Air Line (section 7.1)
3. Internal Connections (section 8.1)
4. Recommended Spare Parts (chapter 10)

The differences are described based on "MOTOMAN-SIA20D / SIA20F INSTRUCTIONS" (156387-1CD). Read this manual thoroughly replacing the subject matters for changes with this supplementary instruction manual.

## 5 Basic Specifications

### 5.6 Drip-Proof Specification SIA20D-A01 / SIA20F-A01

(Page: 5-7)

#### 5.6.1 Flange Part


This applies to SIA20D-A03 / SIA20F-A03.

The wrist flange of SIA20D-A03 / SIA20F-A03 with one external axis drip-proof specification has a cable through hole as well as the standard specification.

When mounting equipment such as an attachment, apply drip-proof treatment on the flange face. Waterproof flange is available as an option.

The connectors for internal user I/O wiring harness are not drip-proof type; if the manipulator is installed at a location where some water is splashed on the manipulator, apply drip-proof treatment on those connectors when connection is completed. (Example: use of silicon tape, or connection within a connection box.)

 *Fig. 5-6: Details of Flange*

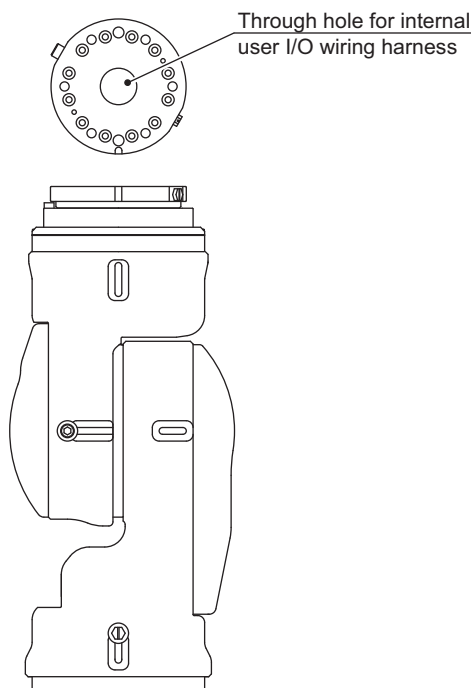


## 7 System Application

### 7.1 Internal User I/O Wiring Harness and Air Line

(Pages 7-2 to 7-3)


The cables of one external axis are added to SIA20D-A02, A03 / SIA20F-A02, A03 in comparison with SIA20D / SIA20F-A0\*.

 Fig. 7-1: Internal User I/O Wiring Harness, External Axis Cables and Air Lines

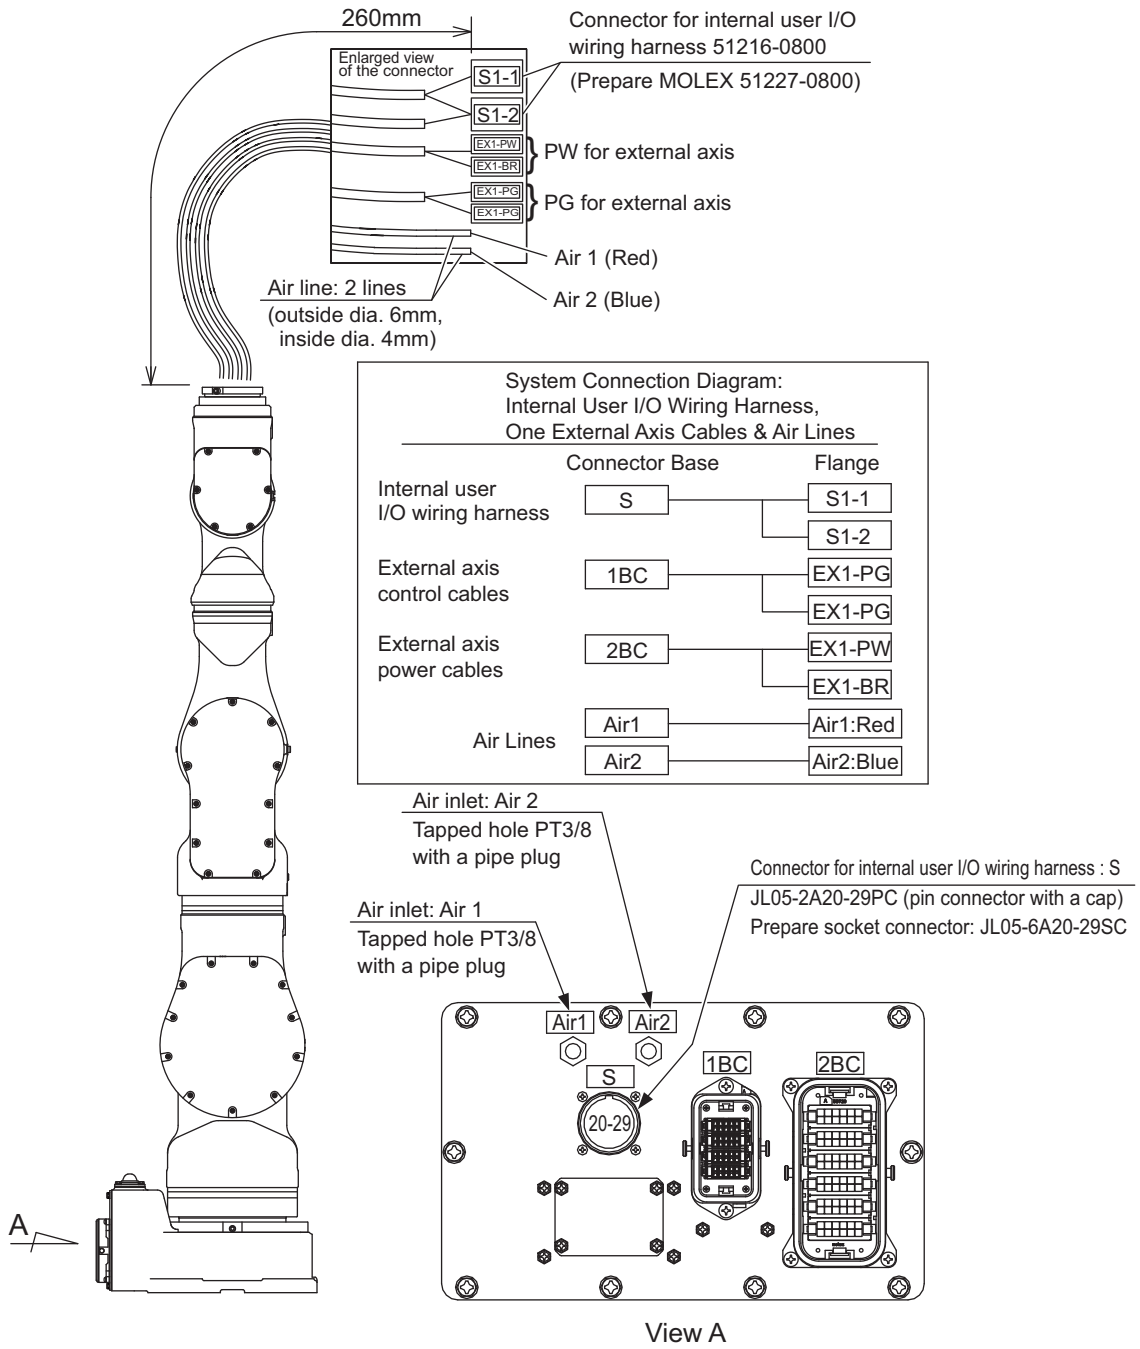

7 System Application  
 7.1 Internal User I/O Wiring Harness and Air Line

 Fig. 7-2: Internal User I/O Wiring Harness and External Axis Cable Connector (Pin Details)

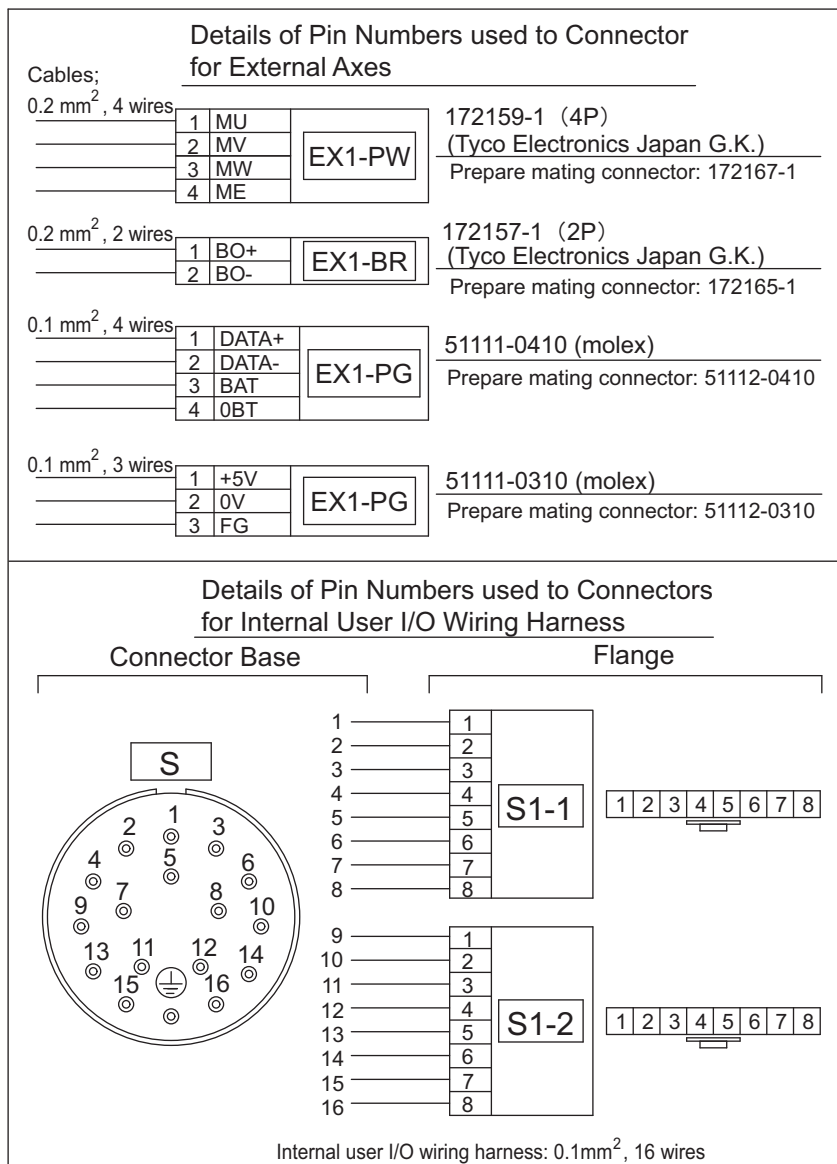

## **8 Electrical Equipment Specification**

### **8.1 Internal Connections (Pages: 8-2 to 8-3)**

Since the cables of one external axis are added to SIA20D-A02, A03 / SIA20F-A02, A03 in comparison with SIA20D / SIA20F-A0\*, *fig. 8-1(a) "Internal Connection Diagram"* and *fig. 8-1(b) "Internal Connection Diagram"* are changed.

Fig. 8-1(a): Internal Connection Diagram


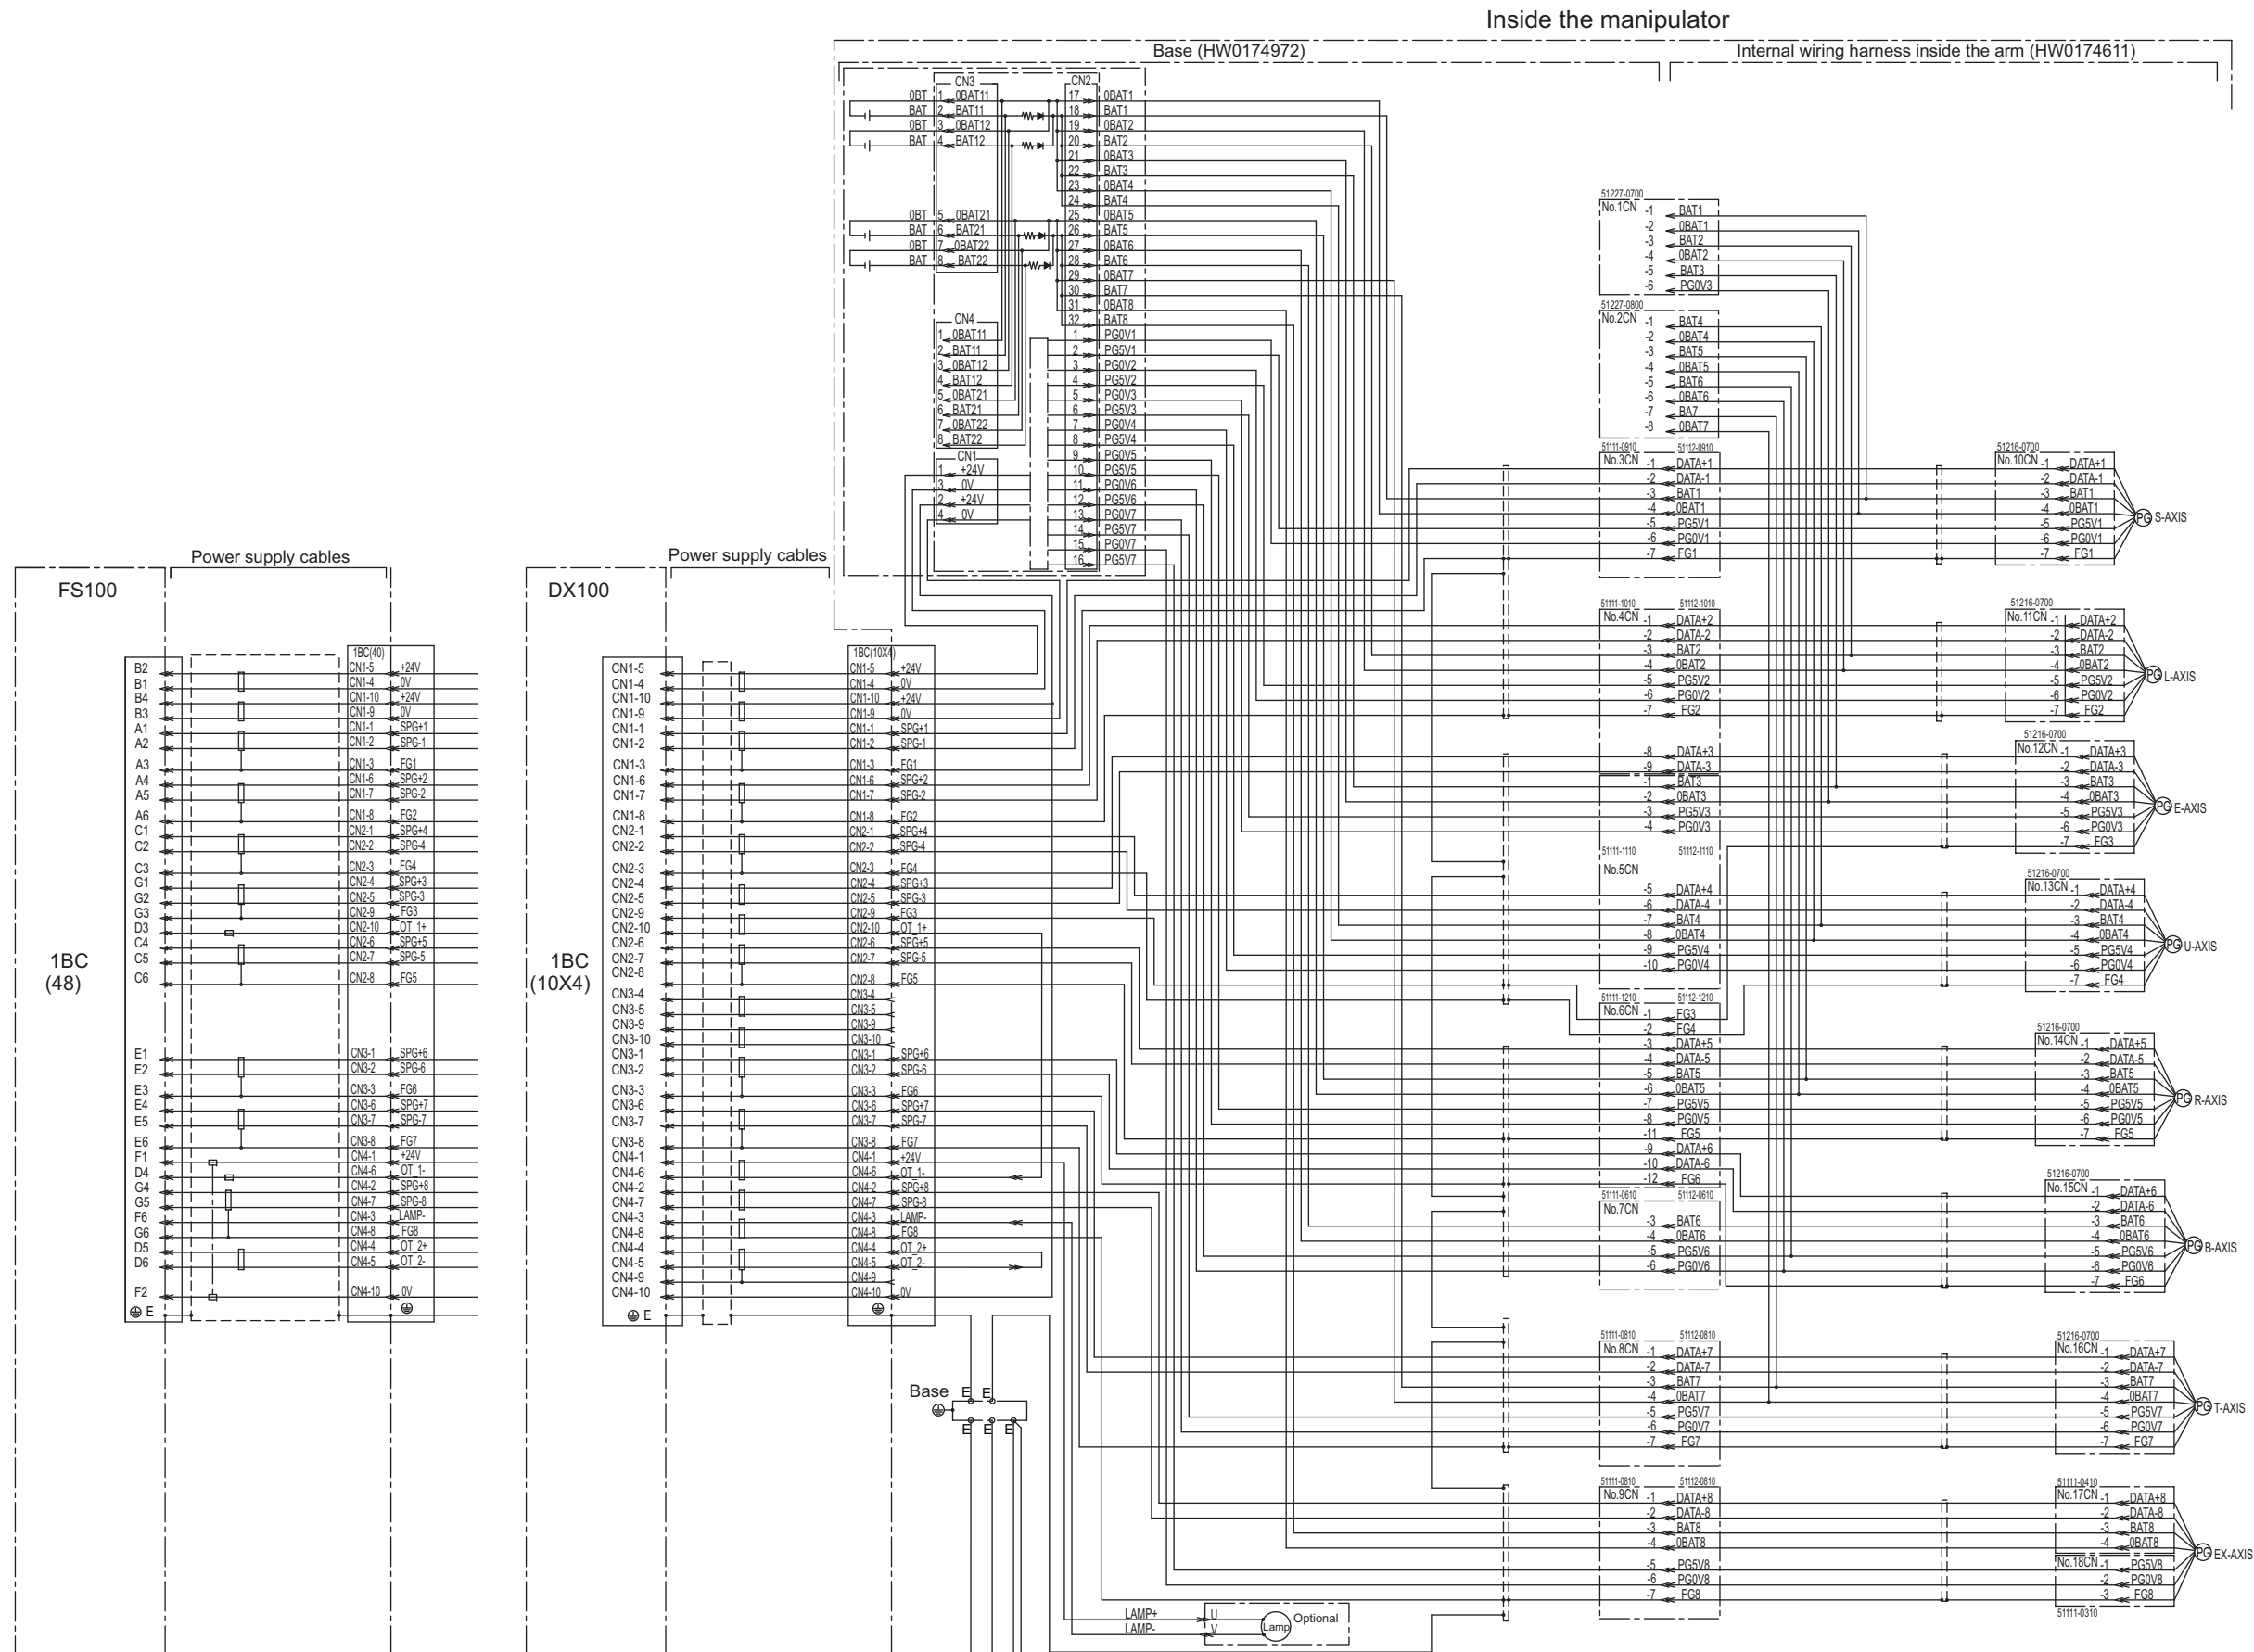 




Fig. 8-1(b): Internal Connection Diagram

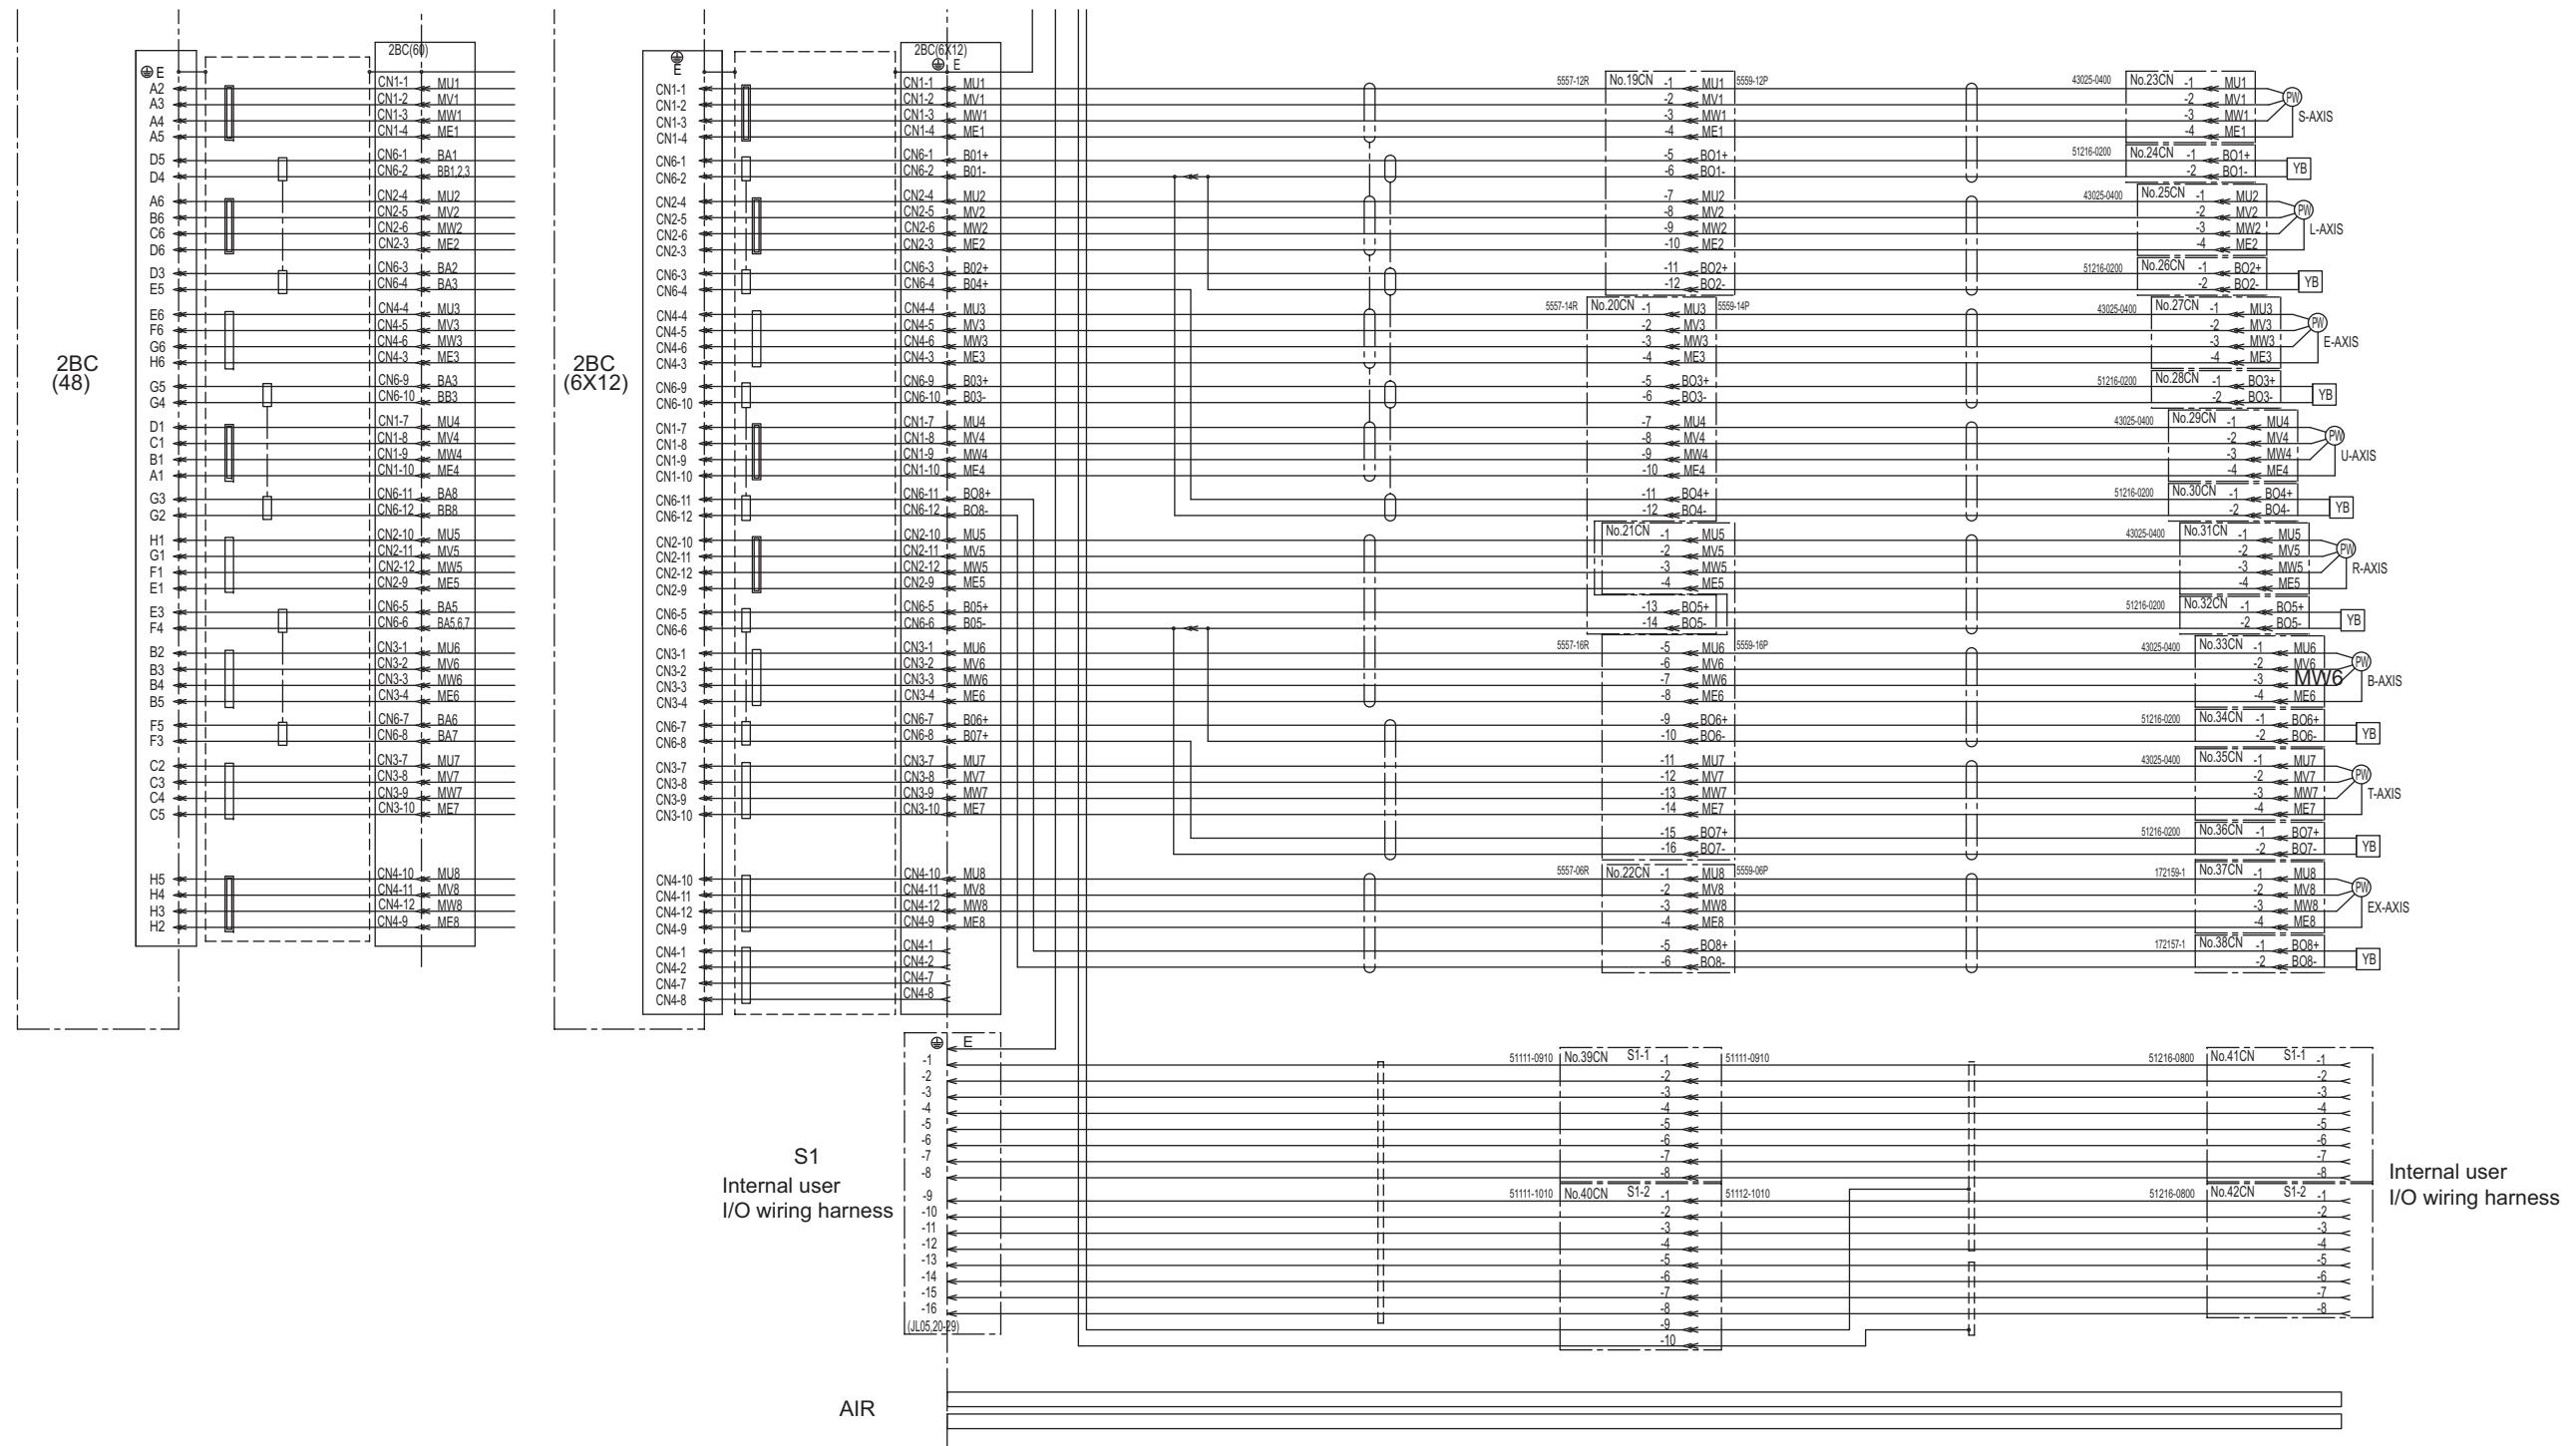 

## 10 Recommended Spare Parts (Page: 10-1)

Since the cables of one external axis are added to SIA20D-A02, A03 / SIA20F-A02, A03 in comparison with SIA20D / SIA20F-A0\*, "Wire Harness in Manipulator" in Table 10-1 is replaced with the following one.

Table 10-1: Spare Parts for SIA20D-A02, A03 / SIA20F-A02, A03 (Difference)

Rank	Parts No.	Name	Type	Manufacturer	Qty	Qty per Unit	Remarks
B	6	Wire Harness in Manipulator	HW0174611-A	Yaskawa Electric Corporation	1	1	Arm component (Difference)

# MOTOMAN-SIA20D/SIA20F

## SUPPLEMENTAL INSTRUCTIONS

---

**HEAD OFFICE**

2-1 Kurosakishiroishi, Yahatanishi-ku, Kitakyushu 806-0004, Japan  
Phone +81-93-645-7703 Fax +81-93-645-7802

YASKAWA America Inc. (Motoman Robotics Division)  
100 Automation Way, Miamisburg, OH 45342, U.S.A.  
Phone +1-937-847-6200 Fax +1-937-847-6277

YASKAWA Europe GmbH (Robotics Division)  
Yaskawastrasse 1, 85391 Allershausen, Germany  
Phone +49-8166-90-100 Fax +49-8166-90-103

YASKAWA Nordic AB  
Bredbandet 1 vån. 3 varvsholmen 392 30 Kalmar, Sweden  
Phone +46-480-417-800 Fax +46-480-417-999

YASKAWA Electric (China) Co., Ltd.  
22/F One Corporate Avenue No.222, Hubin Road, Huangpu District, Shanghai 200021, China  
Phone +86-21-5385-2200 Fax +86-21-5385-3299

YASKAWA SHOUGANG ROBOT Co. Ltd.  
No7 Yongchang North Road, Beijing E&T Development Area, China 100176  
Phone +86-10-6788-2858 Fax +86-10-6788-2878

YASKAWA India Private Ltd. (Robotics Division)  
#426, Udyog Vihar, Phase- IV, Gurgaon, Haryana, India  
Phone +91-124-475-8500 Fax +91-124-475-8542

YASKAWA Electric Korea Co., Ltd  
9F, Kyobo Securities Bldg., 26-4, Yeouido-dong, Yeongdeungpo-gu, Seoul 150-737, Korea  
Phone +82-2-784-7844 Fax +82-2-784-8495

YASKAWA Electric Taiwan Corporation  
12F, No.207, Sec. 3, Beishin Rd., Shindian District, New Taipei City 23143, Taiwan  
Phone +886-2-8913-1333 Fax +886-2-8913-1513

YASKAWA Electric (Singapore) PTE Ltd.  
151 Lorong Chuan, #04-02A, New Tech Park, Singapore 556741  
Phone +65-6282-3003 Fax +65-6289-3003

YASKAWA Electric (Thailand) Co., Ltd.  
252/125-126 27th Floor, Tower B Muang Thai-Phatra Complex Building,  
Rachadaphisek Road, Huaykwang, Bangkok 10320, Thailand  
Phone +66-2693-2200 Fax +66-2693-4200

PT. YASKAWA Electric Indonesia  
Secure Building-Gedung B Lantai Dasar & Lantai 1 Jl. Raya Protokol Halim Perdanakusuma,  
Jakarta 13610, Indonesia  
Phone +62-21-2982-6470 Fax +62-21-2982-6741

---

Specifications are subject to change without notice  
for ongoing product modifications and improvements.