

Motoman NX 100 Controller

Arm Interference Instructions Manual

Part Number: 149648-2CD
Revision 1

MOTOMAN
a YASKAWA company

Motoman, Incorporated
805 Liberty Lane
West Carrollton, OH 45449
TEL: (937) 847-6200
FAX: (937) 847-6277
24-Hour Service Hotline: (937) 847-3200

COMPLETE OUR ONLINE SURVEY TO RECEIVE A FREE HAT!

Motoman is committed to total customer satisfaction! Please give us your feedback on the technical manuals you received with your Motoman robotic solution.

To participate, go to the following website:

<http://www.motoman.com/pubs/survey.php>

The information contained within this document is the proprietary property of Motoman, Inc., and may not be copied, reproduced or transmitted to other parties without the expressed written authorization of Motoman, Inc.

©2006 by MOTOMAN
All Rights Reserved

Because we are constantly improving our products, we reserve the right to change specifications without notice. MOTOMAN is a registered trademark of YASKAWA Electric Manufacturing.

Chapter 1

Introduction

1.1 About This Document

This manual provides information for the Arm Interference function and contains the following sections:

CHAPTER 1 - INTRODUCTION

Provides general information about the structure of this manual, a list of reference documents, and customer service information.

CHAPTER 2 - SAFETY

This section provides information regarding the safe use and operation of Motoman products.

CHAPTER 3 - ARM INTERFERENCE INSTRUCTIONS

Provides detailed information for the Arm Interference function.

1.2 Reference to Other Documentation

For additional information refer to the following:

- NX100 Controller Manual (P/N 149201-1)
- Concurrent I/O Manual (P/N 149230-1)
- Operator's Manual for your application
- Vendor manuals for system components not manufactured by Motoman

1.3 Customer Service Information

If you are in need of technical assistance, contact the Motoman service staff at (937) 847-3200. Please have the following information ready before you call:

- Robot Type (EA1400N, HP20, etc.)
- Application Type (welding, handling, etc.)
- Robot Serial Number (located on back side of robot arm)
- Robot Sales Order Number (located on back of controller)

Notes

Chapter 2

Safety

2.1 Introduction

It is the purchaser's responsibility to ensure that all local, county, state, and national codes, regulations, rules, or laws relating to safety and safe operating conditions for each installation are met and followed.

We suggest that you obtain and review a copy of the ANSI/RIA National Safety Standard for Industrial Robots and Robot Systems. This information can be obtained from the Robotic Industries Association by requesting ANSI/RIA R15.06-1999. The address is as follows:

Robotic Industries Association
900 Victors Way
P.O. Box 3724
Ann Arbor, Michigan 48106
TEL: (734) 994-6088
FAX: (734) 994-3338
INTERNET: www.roboticsonline.com

Ultimately, the best safeguard is trained personnel. The user is responsible for providing personnel who are adequately trained to operate, program, and maintain the robot cell. **The robot must not be operated by personnel who have not been trained!**

We recommend that all personnel who intend to operate, program, repair, or use the robot system be trained in an approved Motoman training course and become familiar with the proper operation of the system.

This safety section addresses the following:

- Standard Conventions (Section 2.2)
- General Safeguarding Tips (Section 2.3)
- Mechanical Safety Devices (Section 2.4)
- Installation Safety (Section 2.5)
- Programming, Operation, and Maintenance Safety (Section 2.6)

2.2 Standard Conventions

This manual includes the following alerts – in descending order of severity – that are essential to the safety of personnel and equipment. As you read this manual, pay close attention to these alerts to insure safety when installing, operating, programming, and maintaining this equipment.



DANGER!

Information appearing in a **DANGER** concerns the protection of personnel from the immediate and imminent hazards that, if not avoided, will result in immediate, serious personal injury or loss of life in addition to equipment damage.



WARNING!

Information appearing in a **WARNING** concerns the protection of personnel and equipment from potential hazards that can result in personal injury or loss of life in addition to equipment damage.



CAUTION!

Information appearing in a **CAUTION** concerns the protection of personnel and equipment, software, and data from hazards that can result in minor personal injury or equipment damage.



Note: Information appearing in a Note provides additional information which is helpful in understanding the item being explained.

2.3 General Safeguarding Tips

All operators, programmers, plant and tooling engineers, maintenance personnel, supervisors, and anyone working near the robot must become familiar with the operation of this equipment. All personnel involved with the operation of the equipment must understand potential dangers of operation. General safeguarding tips are as follows:

- Improper operation can result in personal injury and/or damage to the equipment. Only trained personnel familiar with the operation of this robot, the operator's manuals, the system equipment, and options and accessories should be permitted to operate this robot system.
- Do not enter the robot cell while it is in automatic operation. Programmers must have the teach pendant when they enter the robot cell.
- Improper connections can damage the robot. All connections must be made within the standard voltage and current ratings of the robot I/O (Inputs and Outputs).
- The robot must be placed in Emergency Stop (E-STOP) mode whenever it is not in use.
- In accordance with ANSI/RIA R15.06-1999, section 4.2.5, Sources of Energy, use lockout/tagout procedures during equipment maintenance. Refer also to Section 1910.147 (29CFR, Part 1910), Occupational Safety and Health Standards for General Industry (OSHA).

2.4 Mechanical Safety Devices

The safe operation of the robot, positioner, auxiliary equipment, and system is ultimately the user's responsibility. The conditions under which the equipment will be operated safely should be reviewed by the user. The user must be aware of the various national codes, ANSI/RIA R15.06-1999 safety standards, and other local codes that may pertain to the installation and use of industrial equipment. Additional safety measures for personnel and equipment may be required depending on system installation, operation, and/or location. The following safety equipment is provided as standard:

- Safety fences and barriers
- Light curtains and/or safety mats
- Door interlocks
- Emergency stop palm buttons located on operator station, robot controller, and programming pendant

Check all safety equipment frequently for proper operation. Repair or replace any non-functioning safety equipment immediately.

2.5 Installation Safety

Safe installation is essential for protection of people and equipment. The following suggestions are intended to supplement, but not replace, existing federal, local, and state laws and regulations. Additional safety measures for personnel and equipment may be required depending on system installation, operation, and/or location. Installation tips are as follows:

- Be sure that only qualified personnel familiar with national codes, local codes, and ANSI/RIA R15.06-1999 safety standards are permitted to install the equipment.
- Identify the work envelope of each robot with floor markings, signs, and barriers.
- Position all controllers outside the robot work envelope.
- Whenever possible, install safety fences to protect against unauthorized entry into the work envelope.
- Eliminate areas where personnel might get trapped between a moving robot and other equipment (pinch points).
- Provide sufficient room inside the workcell to permit safe teaching and maintenance procedures.

2.6 Programming, Operation, and Maintenance Safety

All operators, programmers, plant and tooling engineers, maintenance personnel, supervisors, and anyone working near the robot must become familiar with the operation of this equipment. Improper operation can result in personal injury and/or damage to the equipment. Only trained personnel familiar with the operation, manuals, electrical design, and equipment interconnections of this robot should be permitted to program, operate, and maintain the system. All personnel involved with the operation of the equipment must understand potential dangers of operation.

- Inspect the robot and work envelope to be sure no potentially hazardous conditions exist. Be sure the area is clean and free of water, oil, debris, etc.
- Be sure that all safeguards are in place. Check all safety equipment for proper operation. Repair or replace any non-functioning safety equipment immediately.
- Do not enter the robot cell while it is in automatic operation. Be sure that only the person holding the programming pendant enters the workcell.
- Check the E-STOP button on the programming pendant for proper operation before programming. The robot must be placed in Emergency Stop (E-STOP) mode whenever it is not in use.
- Back up all programs and jobs onto suitable media before program changes are made. To avoid loss of information, programs, or jobs, a backup must always be made before any service procedures are done and before any changes are made to options, accessories, or equipment.

- Any modifications to PART 1, System Section, of the robot controller concurrent I/O program can cause severe personal injury or death, as well as damage to the robot! Do not make any modifications to PART 1, System Section. Making any changes without the written permission of Motoman will VOID YOUR WARRANTY!
- Some operations require standard passwords and some require special passwords. Special passwords are for Motoman use only. YOUR WARRANTY WILL BE VOID if you use these special passwords.
- The robot controller allows modifications of PART 2, User Section, of the concurrent I/O program and modifications to controller parameters for maximum robot performance. Great care must be taken when making these modifications. All modifications made to the controller will change the way the robot operates and can cause severe personal injury or death, as well as damage the robot and other parts of the system. Double-check all modifications under every mode of robot operation to ensure that you have not created hazards or dangerous situations.
- Check and test any new or modified program at low speed for at least one full cycle.
- This equipment has multiple sources of electrical supply. Electrical interconnections are made between the controller and other equipment. Disconnect and lockout/tagout all electrical circuits before making any modifications or connections.
- Do not perform any maintenance procedures before reading and understanding the proper procedures in the appropriate manual.
- Use proper replacement parts.
- Improper connections can damage the robot. All connections must be made within the standard voltage and current ratings of the robot I/O (Inputs and Outputs).

Notes

NX100 OPTIONS INSTRUCTIONS

FOR ARM INTERFERENCE CHECK FUNCTION

Upon receipt of the product and prior to initial operation, read these instructions thoroughly, and retain for future reference.

MOTOMAN INSTRUCTIONS

MOTOMAN-□□□ INSTRUCTIONS
NX100 INSTRUCTIONS
NX100 OPERATOR'S MANUAL
NX100 MAINTENANCE MANUAL

The NX100 operator's manual above corresponds to specific usage.
Be sure to use the appropriate manual.



 **MANDATORY**

- This manual explains the arm interference check function of the NX100 system and general operations. Read this manual carefully and be sure to understand its contents before handling the NX100.
- General items related to safety are listed in Section 1: Safety of the NX100 Instructions. To ensure correct and safe operation, carefully read the NX100 Instructions before reading this manual.

 **CAUTION**

- Some drawings in this manual are shown with the protective covers or shields removed for clarity. Be sure all covers and shields are replaced before operating this product.
- The drawings and photos in this manual are representative examples and differences may exist between them and the delivered product.
- YASKAWA may modify this model without notice when necessary due to product improvements, modifications, or changes in specifications. If such modification is made, the manual number will also be revised.
- If your copy of the manual is damaged or lost, contact a YASKAWA representative to order a new copy. The representatives are listed on the back cover. Be sure to tell the representative the manual number listed on the front cover.
- YASKAWA is not responsible for incidents arising from unauthorized modification of its products. Unauthorized modification voids your product's warranty.

Notes for Safe Operation

Read this manual carefully before installation, operation, maintenance, or inspection of the NX100.

In this manual, the Notes for Safe Operation are classified as “WARNING,” “CAUTION,” “MANDATORY,” or “PROHIBITED.”



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury to personnel.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury to personnel and damage to equipment. It may also be used to alert against unsafe practices.



MANDATORY

Always be sure to follow explicitly the items listed under this heading.



PROHIBITED

Must never be performed.

Even items described as “CAUTION” may result in a serious accident in some situations. At any rate, be sure to follow these important items.



To ensure safe and efficient operation at all times, be sure to follow all instructions, even if not designated as “CAUTION” and “WARNING.”



WARNING

- Before operating the manipulator, check that servo power is turned OFF when the emergency stop buttons on the front door of the NX100 and programming pendant are pressed. When the servo power is turned OFF, the SERVO ON LED on the programming pendant is turned OFF.

Injury or damage to machinery may result if the emergency stop circuit cannot stop the manipulator during an emergency. The manipulator should not be used if the emergency stop buttons do not function.

Emergency Stop Button



- Once the emergency stop button is released, clear the cell of all items which could interfere with the operation of the manipulator. Then turn the servo power ON.

Injury may result from unintentional or unexpected manipulator motion.

Release of Emergency Stop



- Observe the following precautions when performing teaching operations within the P-point maximum envelope of the manipulator :
 - View the manipulator from the front whenever possible.
 - Always follow the predetermined operating procedure.
 - Ensure that you have a safe place to retreat in case of emergency.

Improper or unintended manipulator operation may result in injury.

- Confirm that no persons are present in the P-point maximum envelope of the manipulator and that you are in a safe location before:
 - Turning ON the NX100 power.
 - Moving the manipulator with the programming pendant.
 - Running the system in the check mode.
 - Performing automatic operations.

Injury may result if anyone enters the P-point maximum envelope of the manipulator during operation. Always press an emergency stop button immediately if there is a problems. The emergency stop buttons are located on the right of the front door of the NX100 and the programming pendant.



CAUTION

- Perform the following inspection procedures prior to conducting manipulator teaching. If problems are found, repair them immediately, and be sure that all other necessary processing has been performed.

-Check for problems in manipulator movement.
-Check for damage to insulation and sheathing of external wires.

- Always return the programming pendant to the hook on the NX100 cabinet after use.

The programming pendant can be damaged if it is left in the P-point maximum envelope of the manipulator, on the floor, or near fixtures.

- Read and understand the Explanation of Warning Labels in the NX100 Instructions before operating the manipulator.

Definition of Terms Used Often in This Manual

The MOTOMAN manipulator is the YASKAWA industrial robot product.

The manipulator usually consists of the controller, the programming pendant, and supply cables.

In this manual, the equipment is designated as follows.

Equipment	Manual Designation
NX100 Controller	NX100
NX100 Programming Pendant	Programming Pendant
Cable between the manipulator and NX100	Manipulator Cable

Descriptions of the programming pendant keys, buttons, and displays are shown as follows:

Equipment		Manual Designation
Programming Pendant	Character Keys	The keys which have characters printed on them are denoted with []. ex. [ENTER]
	Symbol Keys	The keys which have a symbol printed on them are not denoted with [] but depicted with a small picture. ex. page key  The cursor key is an exception, and a picture is not shown.
	Axis Keys Numeric Keys	"Axis Keys" and "Numeric Keys" are generic names for the keys for axis operation and number input.
	Keys pressed simultaneously	When two keys are to be pressed simultaneously, the keys are shown with a "+" sign between them, ex. [SHIFT]+[COORD]
	Displays	The menu displayed in the programming pendant is denoted with { }. ex. {JOB}

Description of the Operation Procedure

In the explanation of the operation procedure, the expression "Select •••" means that the cursor is moved to the object item and the SELECT key is pressed, or that the item is directly selected by touching the screen.

Registered Trademark

In this manual, names of companies, corporations, or products are trademarks, registered trademarks, or brand names for each company or corporation. The indications of (R) and TM are omitted.


1	Outline	
2	Settings for Arm Interference Check	
	2.1 TOOL INTERFERE File	2-1
	2.2 Enable or Disable Arm Interference Check.....	2-2
	2.3 Calibration Between Manipulators	2-2
3	Example Settings for the TOOL INTERFERE File	
4	Alarms and Errors	
	4.1 During Axis Operation	4-1
	4.2 During Playback, Forward, Backward, or Test Operation	4-1
5	Notes on the Arm Interference Check Function	

1 Outline

In a system with one controller and multiple manipulators, the arm interference check function can be used to detect possible interference to avoid collision during operation. The following three patterns can be checked:

- Arm against arm
- Arm against tool
- Tool against tool

Interference is checked by using a cylinder that is slightly larger than the arm or tool. A sphere is placed on both ends of the cylinder. If the cylinder and spheres of one manipulator have any contact with those of the other while moving, the manipulators stop because interference is detected.

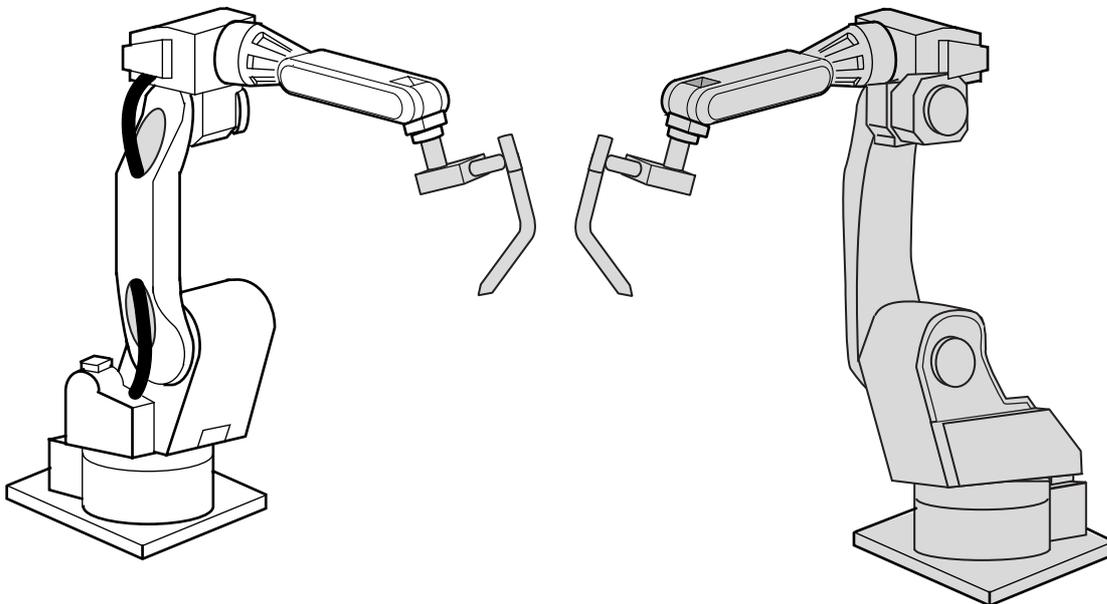

2 Settings for Arm Interference Check

2.1 TOOL INTERFERE File

To use the arm interference check function, settings for the cylinders and spheres of the manipulator's arms and tools are required. For the arms, the settings have already been preset at the factory so there is no need to make these settings. For the tools, the settings must be made by the user in the TOOL INTERFERE file, because the tool's form varies depending on the application.


Select "ROBOT" from the main menu, and then select "TOOL INTERFERE." The following display appears.

TOOL INTERFERENCE			
TOOL NO. : 0			
	POINT1 (mm)	POINT2 (mm)	RADIUS (mm)
1. X	0	140	70
Y	0	0	
Z	0	85	
2. X	140	140	30
Y	0	0	
Z	-50	250	
3. X	140	0	20
Y	0	0	
Z	240	400	
4. X	0	0	0
Y	0	0	
Z	0	0	
			PAGE
Main Menu		Short Cut	

- Twenty-four files can be set.
A file is selected according to the tool number specified for the operation.
- The cylinders and spheres can be set for five positions.
Scroll down to view the settings for the other positions.
- For POINT 1 and POINT 2, enter the positions of the two ends of the cylinder.
In the same manner as the tool dimension settings, enter the value measured from the center of the T-axis flange (the tool coordinate origin X=0, Y=0, Z=0).
- Enter the radius of the cylinder and the sphere. For the sphere, settings must be made for both POINT 1 and POINT 2.

2.2 Enable or Disable Arm Interference Check

Enable or disable the arm interference check in the LIMIT RELEASE display. Select "ROBOT" from the main menu, and then select "LIMIT RELEASE." The following display appears.

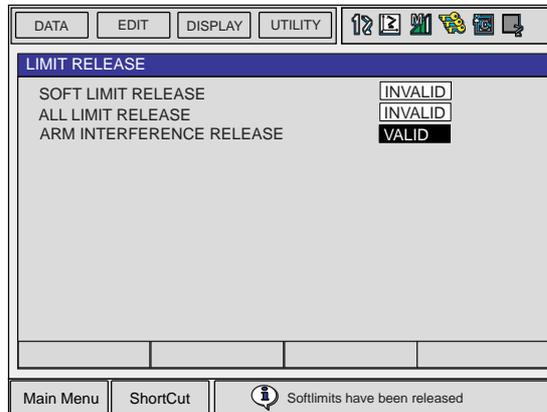

Move the cursor to the setting for "ARM INTERFERENCE RELEASE," and press [SELECT]. The setting switches between "VALID" and "INVALID."


- When "INVALID" is selected
ARM INTERFERENCE RELEASE is invalid, so the arm interference check is enabled.
- When "VALID" is selected
ARM INTERFERENCE RELEASE is valid, so the arm interference check is disabled.

2.3 Calibration Between Manipulators

Calibration between manipulators is necessary prior to use of the arm interference check function. Refer to "3.5 System Setup" of the "NX100/NXC100 OPTIONS INSTRUCTIONS FOR INDEPENDENT/COORDINATED CONTROL FUNCTION (RE-CKI-A443)" for details on how to calibrate between manipulators.

3 Example Settings for the TOOL INTERFERE File

The following diagram is an example of settings for the TOOL INTERFERE file.

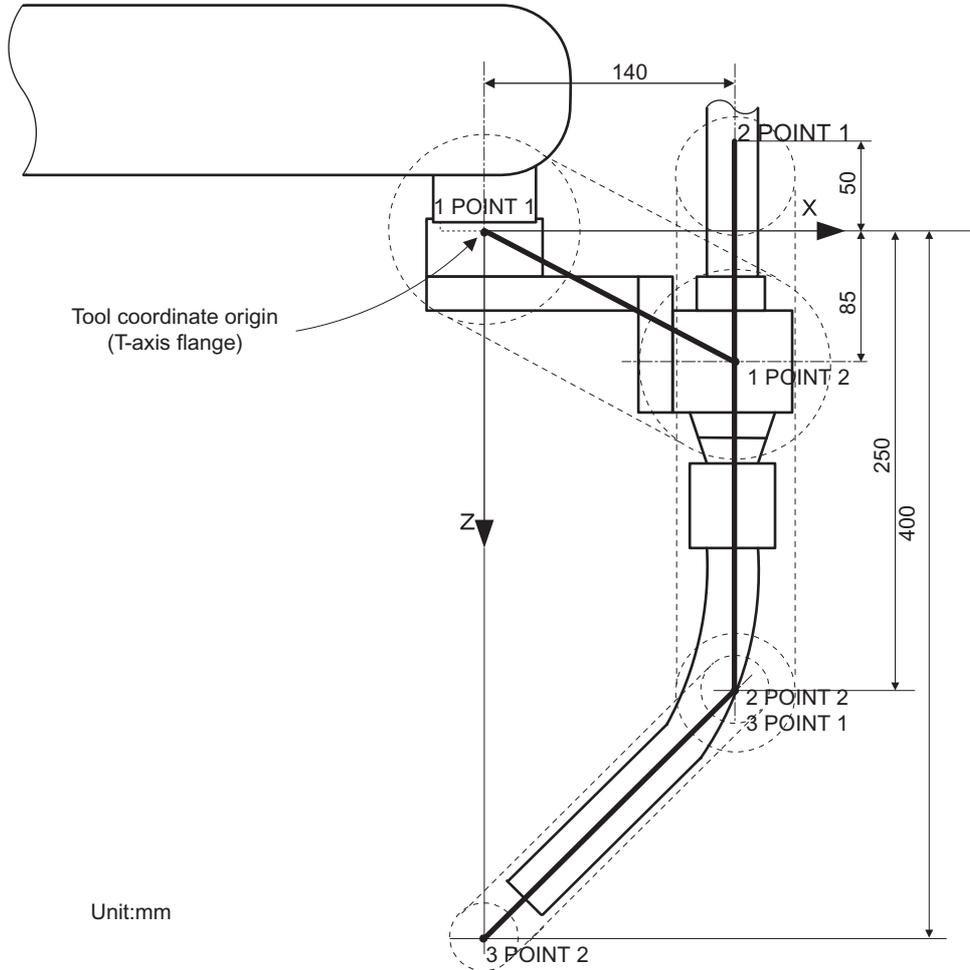

Note: This example has no offset in the Y-direction.

TOOL INTERFERE			
TOOL NO. : 0			
	POINT1 (mm)	POINT2 (mm)	RADIUS (mm)
1. X	0	140	70
Y	0	0	
Z	0	85	
2. X	140	140	30
Y	0	0	
Z	-50	250	
3. X	140	0	20
Y	0	0	
Z	240	400	
4. X	0	0	0
Y	0	0	
Z	0	0	

PAGE

Main Menu Short Cut

4 Alarms and Errors

4.1 During Axis Operation

If the arm or tool interference occurs during axis operation, “ARM (TOOL) INTERFERENCE” is displayed in the message line on the programming pendant, and the manipulators stop. If so, move the axis in the direction where the arms do not interfere. If the axis cannot be moved in such a direction, temporarily disable the arm interference check by validating “ARM INTERFERENCE RELEASE” as explained in “2.2 Enable or Disable Arm Interference Check”.

4.2 During Playback, Forward, Backward, or Test Operation

If arm or tool interference occurs during playback, forward, backward, or test operation, “Alarm 4620 ARM (TOOL) INTERFERENCE” will occur, and the manipulators will stop. If so, move the axis to a position where the arms do not interfere with each other. If interference occurs during playback operation, recheck the job.

5 Notes on the Arm Interference Check Function

Take note of the following precautions when using the arm interference check function.

<Accuracy of arm (tool) interference check>

The accuracy of the arm interference check depends on the accuracy of the calibration between manipulators and any delay of the operating servo system.

Therefore, allow enough margin for the radius in the TOOL INTERFERE file.

<Settings in the TOOL INTERFERE file>

Determine the settings in the TOOL INTERFERE file according to the dimensions in the drawing.

<Applicable manipulator models>

The arm interference check function is not applicable for some manipulator models. Contact your Yaskawa representative for more information.

NX100 OPTIONS INSTRUCTIONS

FOR ARM INTERFERENCE CHECK FUNCTION

HEAD OFFICE

2-1 Kurosaki-Shiroishi, Yahatanishi-ku, Kitakyusyu-shi, 806-0004, Japan
Phone 81-93-645-7745 Fax 81-93-645-7746

MOTOMAN INC. HEADQUARTERS

805 Liberty Lane West Carrollton, OH 45449, U.S.A.
Phone 1-937-847-6200 Fax 1-937-847-6277

YASKAWA MOTOMAN CANADA LTD.

3530 Laird Road, Unit 3, Mississauga, Ontario, L5L 5Z7, Canada
Phone 1-905-569-6686 Fax 1-905-813-5911

MOTOMAN ROBOTICS EUROPE AB

Franska Vagen 1039854, Kalmar, Sweden
Phone 46-480-417800 Fax 46-480-417999

MOTOMAN ROBOTEC GmbH

Kammerfeld strasse 1, DE-85391 Allershausen, Germany
Phone 49-8166-90100 Fax 49-8166-90103

YASKAWA ELECTRIC KOREA CORPORATION

1F Samyang Bldg. 89-1, Shinchun-dong, Donk-Ku, Daegu, Korea
Phone 82-53-745-7844 Fax 82-2-784-8495

YASKAWA ELECTRIC (SINGAPORE) PTE. LTD.

151 Lorong Chuan, #04-01, New Tech Park, Singapore 556741, Singapore
Phone 65-6282-3003 Fax 65-6289-3003

YASKAWA ELECTRIC (MALAYSIA) SDN. BHD.

No.71, Jalan Bandar Rawang 2, 48000 Rawang, Selangor D.E., Malaysia
Phone 60-3-6092-1377 Fax 60-3-6092-6377

YASKAWA ELECTRIC TAIWAN CORPORATION

9F, 16 Nanking E. Rd., Sec. 3, Taipei, Taiwan
Phone 886-2-2502-5003 Fax 886-2-2505-1280

SHOUGANG MOTOMAN ROBOT CO., LTD.

7, Yongchang-North Road, Beijing Economic & Technological Development Area, Beijing 100076, China
Phone 86-10-6788-0541 Fax 86-10-6788-2878



YASKAWA ELECTRIC CORPORATION

YASKAWA

Specifications are subject to change without notice
for ongoing product modifications and improvements.

© Printed in Japan November 2006 06-11

MANUAL NO.

HW0483437 14/14