

YRC1000

Industrial Robot Controller

Key Benefits

- Compact, fast and flexible
- Global standardization
- High path accuracy
- High efficiency

Next Generation Controller

Building on the success of the powerful DX200 controller, the YRC1000 controller is faster and more precise, with the added benefit of being housed in a compact, small footprint cabinet. With a user interface that supports smartphone-like touch operation, this next generation controller provides operators and service staff with powerful functionality while retaining the proven controller performance Yaskawa is known for.






- Compact design, resulting in reduced space requirements
- I/O communication speed is improved by as much as 50% for superior work efficiency
- High path accuracy enables increased precision in trajectory performance independently of motion speed
- Integrated machine and functional safety for simplified setup
- Single controller-to-robot cable for improved cable reliability
- Preventive maintenance information and powerful software tools for analysis and notification enable simplified maintenance
- Built to a global standard and does not require a transformer for input voltages ranging from 380VAC to 480VAC

User-friendly Pendant

- Improved pendant design with enhanced ergonomics and lighter weight
- Several user levels, including OPERATOR and SAFETY MODE
- User interface supports smartphone-like touch operation enabling fast and easy programming
- Provides ability to evaluate 3D simulation of robot motion on screen before or during robot execution
- Specific display options for arc welding, handling, spot welding and general applications; includes built-in help function
- USB connection allows service staff to directly connect for remote service purposes
- SD card slot enables easy transfer of job programs
- 3-position deadman switch in compliance with DIN EN ISO 10218-1

YRC1000 Controller

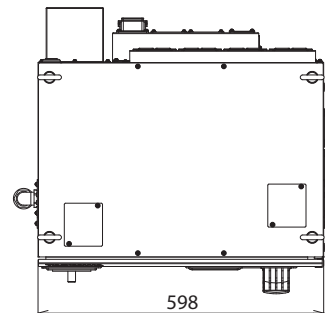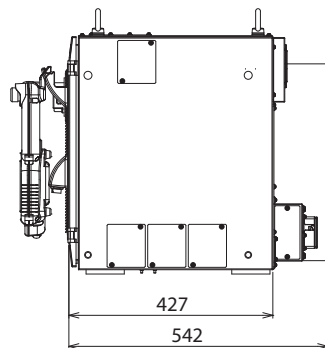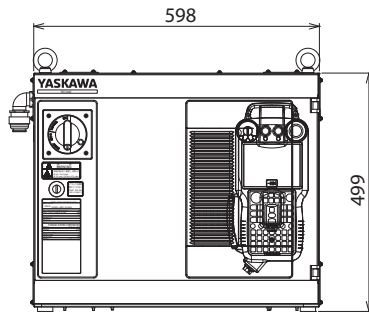

Standard I/O - NPN

Forty optically isolated inputs (32 transistor outputs, 8 relay contact outputs) configured to optimize each application and four break-out cards are provided as standard. PNP I/O available.

I/O Expansion - YRC1000

- EtherNet/IP
- DeviceNet
- Profibus-DP
- Mechatrolink II
- CC-Link
- Remote I/O
- Discrete I/O
- Analog I/O
- Other networks available

SPECIFICATIONS	
Controller	
Dimensions	598 mm (w) x 490 mm (h) x 427 mm (d)
Approximate Mass	70 kg max.
Cooling System	Indirect cooling
Ambient Temperature	-0° to 45° C (operation); -10° to 60° C (storage)
Humidity	90% max. non-condensing
Primary Power Requirements	3-phase, 380-480 VAC (+10%, -15%), 50/60 Hz (±2%)
Digital I/O	4,096 inputs and 4,096 outputs
NPN - Standard	Standard I/O: 40 inputs / 40 outputs consisting of 24 user inputs / 24 user outputs
PNP - Optional	32 transistor outputs; 8 relay outputs max. I/O
Position Feedback	Absolute encoder
Program Memory	JOB: 200,000 steps, 10,000 instructions CIO Ladder Standard: 20,000 steps
Expansion Slots	2 x PCIe (standard); 2 x PCI or 1 x PCI/1 x PCIe (optional)
LAN (Connection to Host)	Ethernet 2 (10 BASE-T / 100 BASE-TX)
Interface	RS-232C/RS422: 1 ch (used by switching)
Multiple Robot Control	Ability to control up to 8 robots / 72 axes
Protection Rating	IP54 (duct fan is IP2X)
Safety Features	
Safety Specs (Category 3 PLe)	Controller safety-rated emergency stop and safety gate inputs. Programming pendant includes: safety-rated emergency stop pushbutton, 3-position enable switch with key-lock and manual brake release built into programming pendant. Meets ANSI/RIA R15.06-2012 and CSA Z434-03
Standard Software Features	Arm interference, collision detection, machine lock and safety interlock
Functional Safety Unit (Category 3 PLd SIL2)	Position monitoring (32 zones), speed limiting, tool monitoring, graphic pendant set-up
Pendant	
Dimensions	152 mm (w) x 299 mm (h) x 53 mm (d)
Pendant Display	5.7-inch full-color touch screen, 640 x 480 (VGA)
Pendant Languages	English, German, Japanese, Spanish, Chinese
Pendant Weight	.73 kg (1.6 lbs)
Material	Reinforced plastics
Coordinate System	Joint, rectangular, cylindrical, tool, 63 user-coordinate frames
Windows® Menu-Driven Interface	User-selectable touch-screen menu, multiple windows supported; one SD card slot; one USB port (2.0)
Pendant O/S	Windows Embedded Compact 7
Protection Rating	IP54
Programming	
Programming Language	INFORM III, menu-driven programming
Robot Motion Control	Joint motion, linear, circular, spline interpolation
Multiple Device Control	Parallel Start, Twin Synchronous, Multiple Group Combinations, Station Coordinated Moves (positioners), Bases (tracks and gantries)
Programmable Logic Control	Ladder monitor, ladder programming, I/F pendant display, address naming, expanded logic operands
Device Instructions	Application specific (arc and spot welding, handling, general purpose)
I/O Instructions	Discrete I/O, 4-bit and 8-bit manipulation, analog output, analog input, analog scaling, sloping
Maintenance	
Maintenance Functions	System monitor, internal maintenance clocks
Self-Diagnostics	Classifies errors and major/minor alarms and displays data; monitors reducers for predictive wear; alerts when major power components reach design life
User Alarm Display	Displays alarm messages for peripheral devices
Alarm Display	Alarm messages; alarm history provides instruction of how to repair fault
I/O Diagnosis	Permits simulated enabled/disabled input/output

Yaskawa America, Inc. | Motoman Robotics Division

100 Automation Way
 Miamisburg, OH 45342
 Tel: 937.847.6200 | motoman.com

Motoman is a registered trademark. Windows is a registered trademark of Microsoft Corp. All other marks are the trademarks and registered trademarks of Yaskawa America, Inc. Technical specifications subject to change without notice. DS-728 ©2017 Yaskawa America, Inc. May 2017

YASKAWA